《ANIMAL RIDES》

USER MANUAL

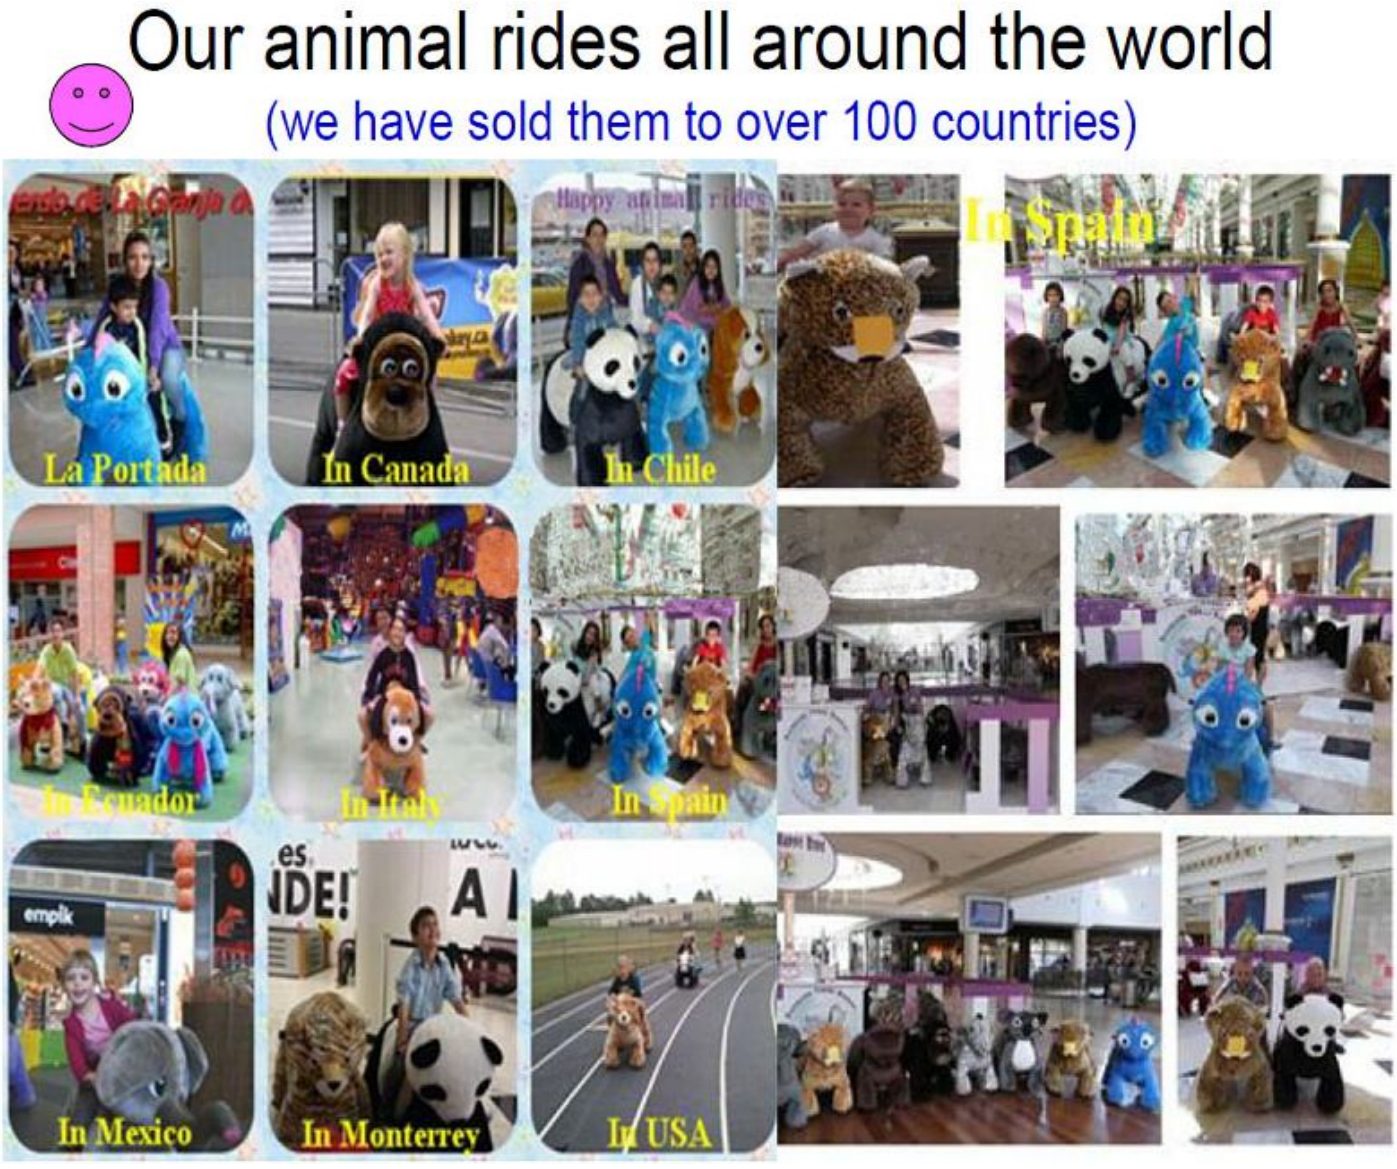

Please read this user manual carefully before operation.

Contents

1). Frame diagram and Models

- 1.1 Frame diagram ……..
- 1.2 Models ……..

2). Machine parameters and operation

- 2.1 Parameters ……..
- 2.2 Operations ……..
- 2.3 Charger ……...
- 2.4 Suitable places ……
- 2.5 Control box adjustment ……...

3). Notes

- 3.1 Using …….
- 3.2 Maintenance ……..
- 3.3 Cleaning …….
- 3.4 Place of install ……
- 3.5 Questions & Answers …….

1.1 Frame diagram

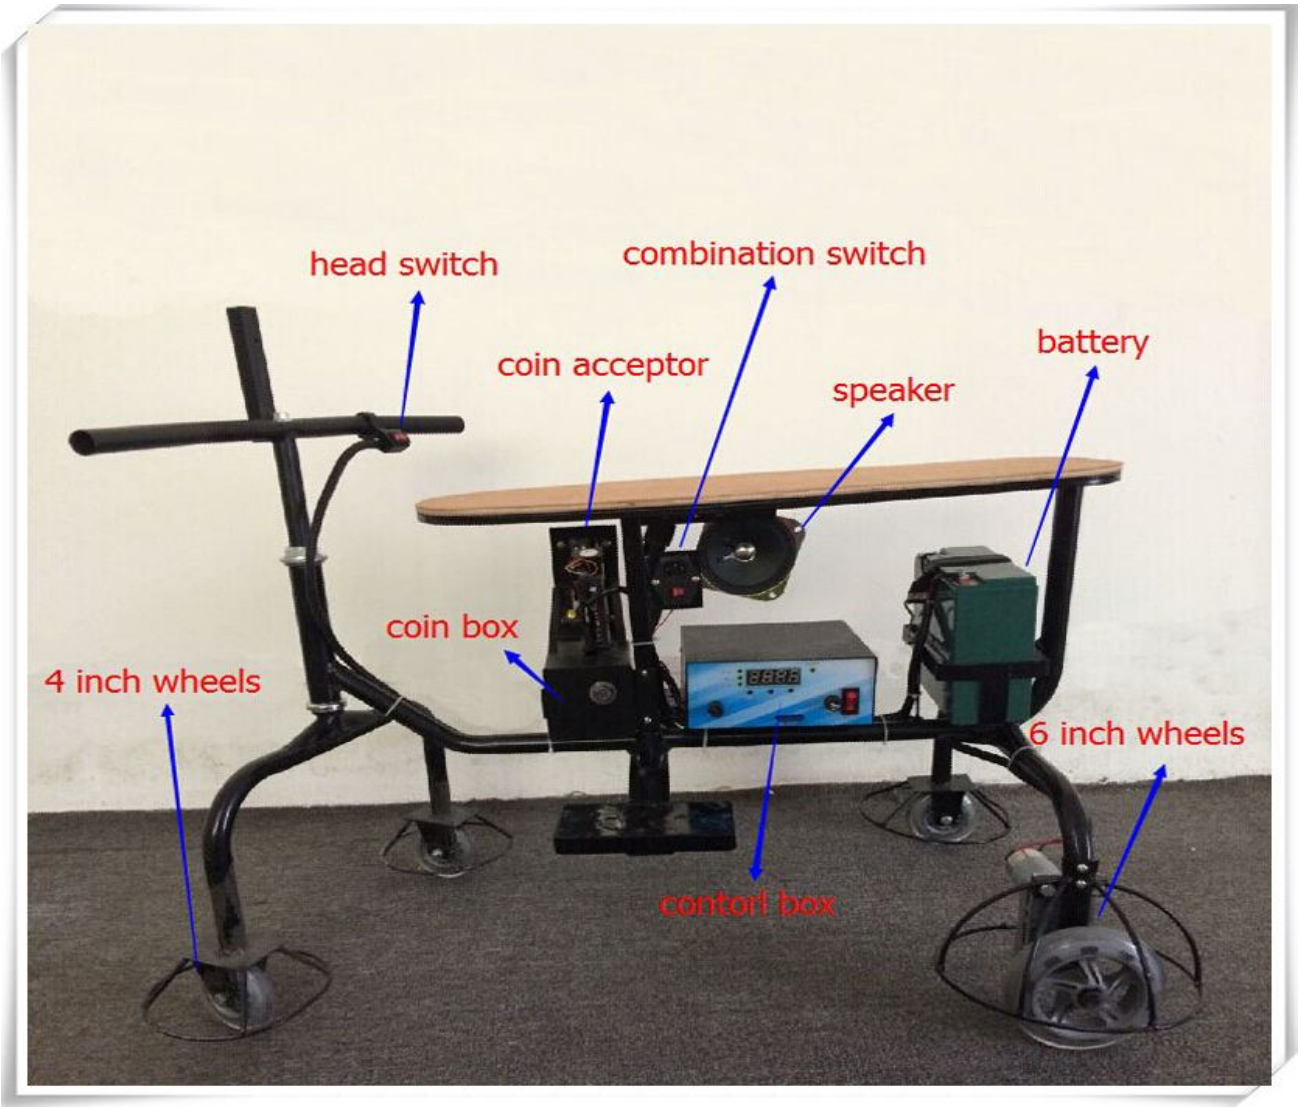

1. **Leading screw:** we use 10 mm thickness screw, this make the frame stable and not easy to fall off.
2. **Life time** of these screws: 2-3 years, not rust.
3. **Speaker:** full range speaker, best sounds.
4. **Control box**: set 1-9 coins, time setting 30s ~30 minutes.
5. **Power Supply:** fix by easily demountable belt.
6. **Motor:** special assembled, steady durable, will not make the plush dirty.
7. **Welding spot:** full weld, durable.

1.2 Models

HOT SALE
CE SGS
www.mantengelectronic.com
MANTENG

HOT SALE
CE SGS
www.mantengelectronic.com
MANTENG

HOT SALE
CE SGS
www.mantengelectronic.com
MANTENG

More Models are coming~~

2.1 Parameters

Dimension: 115*66*88 cm
Packing size: 120* 70*90 (cm)
Weight: 40KG/set
Bearing weight Capacity: 150KG
Material: steel frame, fireproof plush product
Speed: 40-100m/min
Time setting: 30s to 30 minutes
Battery: 12v/3A charge 4 to 5 hours, working 8 hours
Music box: Dozens of songs (memory card) customer can change the music by you.
Wheel: one 6 inch and three 4 inch wheel, stable and durable
Charger: 12V/24A charger, one charger for one machine
Wheel: 10m PU wheel, stable and durable
Diameter range of token:18-32mm
Thickness range of token:1.2-2.5mm
Dimension of coin box:14*11*11cm
Minimum age to ride this machine: 4-year-old
Package: foam block + foam sheet + standard export cartons.
Payment: 30% in advance, 70% balance before shipment.
Production time: 12-15 days after deposit.
Q'ty/20'' FCL: 38 set.
Q'ty/40'' FCL: 80 set.

2.2 Operations

Power switch is located inside of the machine , turn on the power switch, insert token, then turn on the right handle switch, stepped on the pedal, machine will move.

2.3 Charger

The charge plug below at the animal neck, when charging, 2pcs light will on, when finish charge, the red light will off.
Notes: when charge, please turn off the power switch, finish, turn on the power switch.

2.4 Suitable places

Children amusement park, Park, shopping mall supermarket etc.

2.5 Control Box adjustment

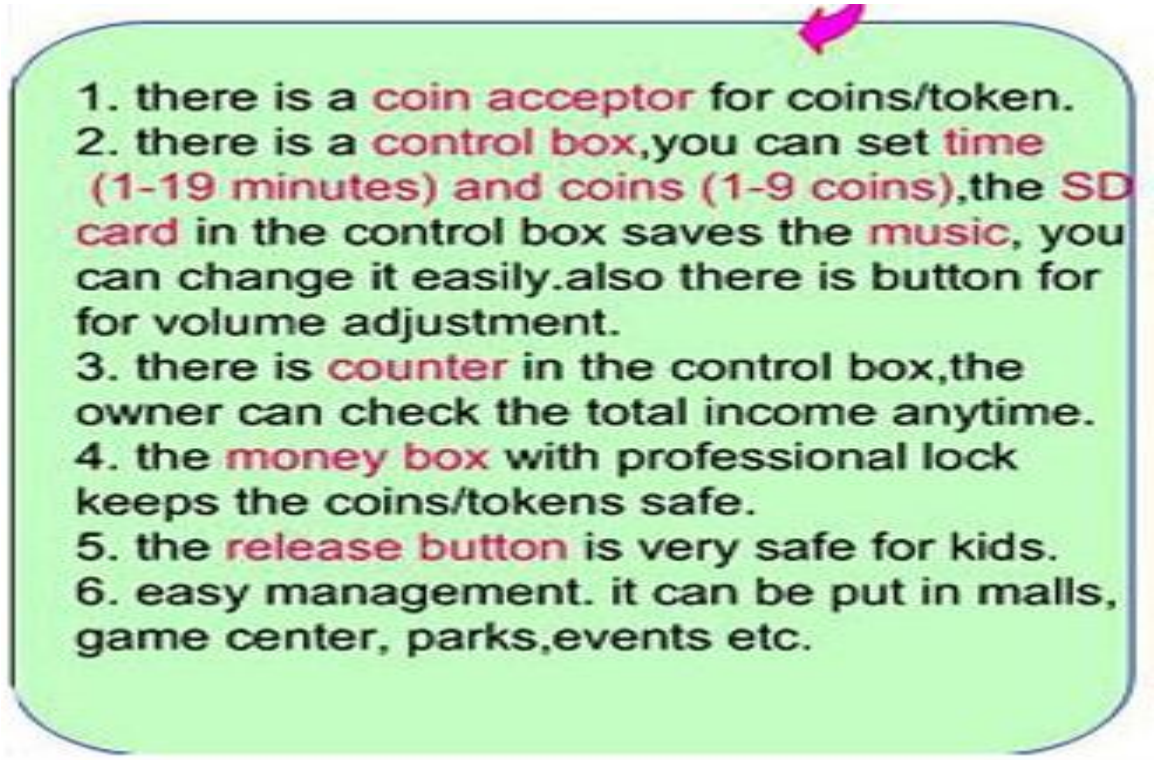
1. there is a coin acceptor for coins/token.
2. there is a control box,you can set time (1-19 minutes) and coins (1-9 coins),the SD card in the control box saves the music, you can change it easily.also there is button for for volume adjustment.
3. there is counter in the control box,the owner can check the total income anytime.
4. the money box with professional lock keeps the coins/tokens safe.
5. the release button is very safe for kids.
6. easy management. it can be put in malls, game center, parks,events etc.

TOTAL: accounting for coins quantity inserted
COIN：will show the insert coin quantity.
TIME：set each round time.
VOLUME：adjust the voice.
MEMORY CARD：save songs, can download different songs.

3.1 Using

1） Machine voltage rang is from 12V to 14V,please use the correct voltage 12V, otherwise will damager the machine.
2） First time use machine, please set the token, then use machine

3） The machine must be played under the adults' supervision
4） Do not play on public streets, roads, ramps, swimming pools, stairs and other dangerous place. Please driving on a flat ground.
5） should not be play in rain and l in the water, please do not pour some liquid on the machine.
6） please use the same battery or the same specification battery
7） should recharge the battery before using machine
8）when move machine, please lee the wheels off ground, in case to rotate the motor, the large current burn other parts.

3.2 Maintenance

1） regularly repair and maintenance machines, to prevent the damage expansion the machine can be used normally
2） when replace some parts, please turn off the power switch, and change the same pars, if use different parts, will damager other parts.
3） replace the power switch to check the wiring is correct and the voltage output is normal. Otherwise it will damage the machine power system
4） control box must be use the voltage range 12V-14V. Otherwise it will damage the machine circuit system or machine is not working

3.3 Cleaning

Use the clean, soft, dry cloth to wipe the machine

3.4 Place of install

Following places are not suitable for installation:

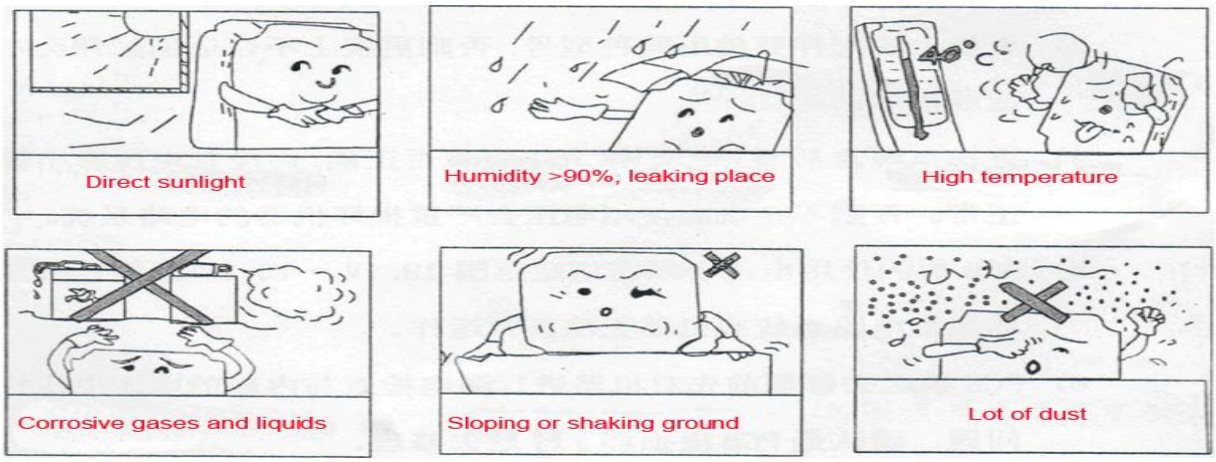

3.5 Questions & Answers

Problem Parts	Problem	Error	Solutions
Coin Acceptor	can not insert token	coin acceptor need adjust	adjust the acceptor
		coin acceptor is broken	change coin acceptor
	some token can not insert	coin acceptor need adjust	adjust the acceptor
		insert the wrong token	insert the right token
Handle switch	can not turn on	the wire is loose	connect the wire
		switch is broken	change switch
Speaker	can not turn on	speaker is broken	change speaker
		voice signal is loose	connect the wire
		volume is weak	louder the volume
Control box	no response	power wire is loose	check the power singal
		singal wire is loose	check the singal wire
		memory card is loose	insert the memory card again
Motor	have sound but can not move	motor wire is loose	check the wire
		motor is broken	change motor